

# IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE,  
ELECTRIC SHOCK, OR INJURY TO PERSONS

## WARNING

When using electric appliances, basic precautions should always be followed including the following:

Read all the instructions before using the appliance.

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

To reduce the risk of electrical shock, do not fill or empty this appliance with any liquid while unit is plugged in. Do not immerse unit in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not pour or spill water or liquids into chamber below the cleaning and rinse tanks.

Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination or repair.

To disconnect, slide the switch to the OFF (O) position, then remove plug from outlet. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Unplug from outlet when not in use and before servicing or cleaning.

Do not let cord hang over edge of table or counter, or touch hot surfaces.

Use only water based solutions. Do not use flammable or toxic liquids.

Keep out of reach of children. For household use only. Do not use outdoors. Do not modify or tamper with the appliance or controls.

CAUTION: IRRITANT. MAY IRRITATE EYES Do not mix with acid cleaners. Do not get in eyes. Keep out of reach of children.

**FIRST AID TREATMENT** Contains non-ionic surfactants. If swallowed, call a Poison Control Centre or doctor immediately. Do not induce vomiting. If in eyes, rinse with water for 15 min.

## JEWELRY CLEANING CAUTIONS

*ONLY use Connoisseurs concentrated or pre-mixed cleaning solutions. Do not use Silver Jewelry Cleaner in the appliance.*

*Before cleaning pearl strands: first test the strand for signs of aging, separation and strength. DO NOT clean in the sonic machine. Clean according to instructions in delicate formula. Remove promptly and allow strand to dry thoroughly on a lint free cloth before wearing.*

*DO NOT use on glued-in stones, dyed stones, or items which should not be immersed in water. If you have any doubt whether the jewelry can be immersed, use a Connoisseurs polishing cloth instead.*

*DO NOT clean antique silver pieces in the La Sonic.*

*DO NOT mix different metals in the same cleaning solution.*

## SAVE THESE INSTRUCTIONS

## Full Two-Year Warranty

1. Connoisseurs warrants this unit to be free of defects in workmanship and materials for two years from date of purchase.
2. If any malfunction occurs, do not use your jewelry cleaner. Connoisseurs will repair or replace it at no charge to you. Simply mail your jewelry cleaner postage paid to the address below with \$6.00 to cover handling costs. Be certain that your jewelry cleaner is wrapped carefully when mailing.
3. Your warranty will be void if malfunction was caused by unreasonable use or was damaged while in your possession. To assure prompt service, please include a letter indicating the specific cause for returning the unit. Allow 4 weeks for servicing and mailing time. Upon the expiration of the warranty period, replacement or repair may be made, but additional charges will apply.
4. Mail to:

Connoisseurs Products Corporation  
17 Presidential Way  
Woburn, MA 01801  
Attn: Repair Department

*In Canada mail to:*

Connoisseurs Canada  
9880 Clark Suite 300  
Montreal, Quebec H3L 2R3



CONNOISSEURS®

This product is listed by Underwriters Laboratories, Inc. and bears the mark:



Jewelry Cleaner  
78B1  
E86379

Visit [www.connoisseurs.com](http://www.connoisseurs.com)  
for more about our complete line of  
"Beauty Treatments for Jewelry."

©2002 PN: 12000210r4<sub>2011</sub>



CONNOISSEURS®

## LaSonic® SONIC JEWELRY CLEANER

The "Beauty Treatment" that  
cleans your jewelry the  
professional way.

You have purchased the most convenient and advanced electrosonic jewelry cleaner available, the Connoisseurs La Sonic. With it, you can safely and effectively clean and rinse your jewelry the professional way, in the convenience of your own home.

Different types of jewelry have different cleaning needs. That's why the La Sonic has two different sonic cleaning cycles.

To select the correct sonic cleaning formula and sonic cycle for cleaning each type of jewelry, use the easy-to-follow Jewelry Care Guide in this manual.

## INSTRUCTIONS

# INSTALLATION

## CLOSELY EXAMINE ILLUSTRATIONS TO UNDERSTAND THESE INSTRUCTIONS FULLY.

- Place appliance on a dry flat level surface near electrical outlet.
- Lift the lid of the La Sonic by lifting the latch handles together. To open the storage compartment only, lift the left latch handle while holding down the right one.
- Use the Connoisseurs La Sonic Jewelry Care Guide to select the correct type of sonic cleaning solution (concentrate or pre-mix) and cleaning cycle for each type of jewelry you are going to clean.
- Be sure to select the proper Connoisseurs formula from the jewelry care guide (all-purpose, regular or delicate) and follow instructions below:
  - **Connoisseurs Concentrated Solutions:** Pour the Connoisseurs concentrated cleaning solution (or the included pre-measured packet) into the left cleaning tank, then fill the tank to the fill line with warm water. Measure the Concentrate as directed on the bottle.
  - **Connoisseurs Ready-to-use Solutions** (available in stores): Pour solution up to the fill line in the left cleaning tank.


Always fill the right rinse tank with warm water for rinsing.
- Lock tanks in place by gently turning clockwise (CW) Turn the switch to OFF(O), then plug the appliance into standard 110 volt outlet.

# OPERATION


- Review the “Important Safety Instructions” before operating this appliance.
- Place jewelry into the basket and immerse into the cleaning tank. Turn the appliance on by sliding the switch from the off position to the correct sonic cleaning speed (High II or Low I) as determined from the Jewelry Care Guide. Clean jewelry for 1-2 minutes. One minute longer for extremely dirty jewelry. Use the touch-up brush for trapped dirt particles or for a quick touch-up.
- Transfer the basket with the jewelry into the rinse tank, then immerse. Slide the switch to the Low (I) power position and rinse for 1 minute.
- To drip dry, lift basket out of rinse water and rest on drying post using the drying hanger.
- Finish drying with the lint-free cloth provided in the storage compartment. For an additional shining touch, use a Connoisseurs polishing cloth.

# STORAGE

- Clean the appliance after use. Unplug the unit, then remove each tank by turning counter clockwise (notice the arrow with lock/unlock icons). Pour solutions into the sink, rinse and dry the tanks.
- Replace tanks into cleaning chambers according to their shape and turn clockwise until tight (notice arrow with lock/unlock icons).
- When not in use, unplug unit, empty tanks, and dry unit. Wrap cord onto cord organizer (on the bottom of unit). Store appliance in a dry location.

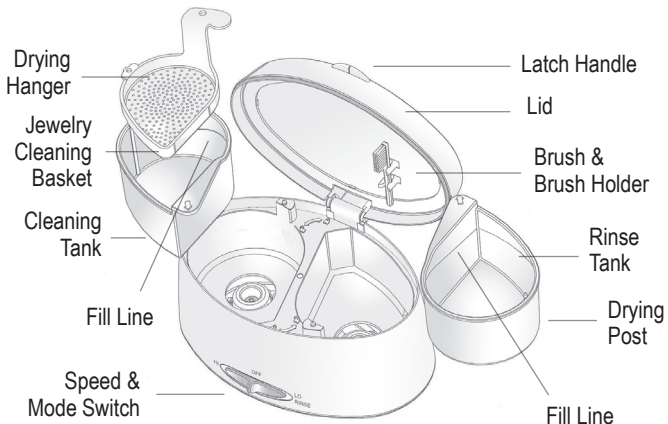

**DO NOT POUR OR SPILL CLEANING SOLUTION OR WATER INTO OPEN CHAMBER BELOW CLEANING OR RINSE TANKS.**

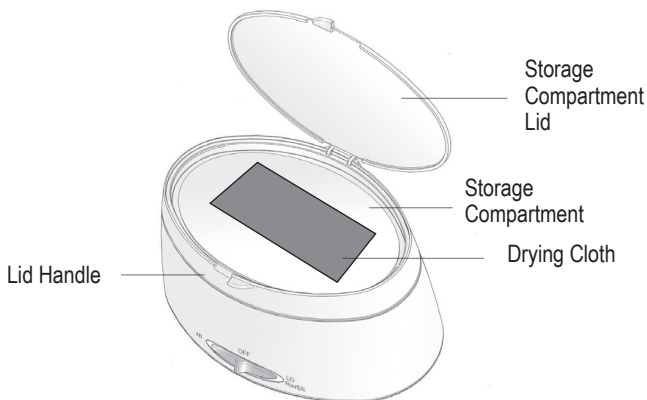

# JEWELRY CARE GUIDE

JEWELRY TYPE	CLEANING FORMULA & CYCLE	
	All Purpose or Regular (II) High	All Purpose or Delicate Low (I)*
AMETHYST	●	
ANTIQUED SILVER	Do Not Clean in Sonic Machine	
AQUAMARINE	●	
CUBIC ZIRCONIA	●	
DIAMOND	●	
EMERALD	Do Not Clean in Sonic Machine	
GARNET	●	
GOLD	●	
GOLD PLATE	●	
ONYX		●
OPAL		●
PEARL*	Do Not Clean in Sonic Machine	
PERIDOT	●	
PLATINUM	●	
RUBY	●	
SAPPHIRE	●	
SILVER**		●
SILVER PLATE**		●
TOPAZ	●	
TURQUOISE		●

\*CLEAN ONLY BY IMMERSING FOR A FEW SECONDS IN CONNOISSEURS DELICATE FORMULA CLEANING SOLUTION. THEN RINSE IN LUKEWARM WATER AND DRY WITH A SOFT CLOTH.

\*\*THE SONIC MACHINE CAN ONLY “CLEAN” SILVER, IT CANNOT REMOVE TARNISH.

Need Help? Call: 800-851-5333 in the USA