

SONIC DAZZLE STIK.

USER GUIDE

THE ULTIMATE BEAUTY TREATMENT FOR JEWELRY



A BREAKTHROUGH INNOVATION IN JEWELRY CARE

The new Sonic Dazzle Stik is an electronically powered cleansing brush for all types of jewelry. Our specially designed brush head oscillates at 5000 cycles per minute for maximum effectiveness. The Sonic Dazzle Stik is ergonomically designed for easy, convenient use and is styled to look great wherever you place it or take it.

Advanced Jewelry Cleansing Gel is perfect for cleaning gold, platinum, diamonds, fashion jewelry, precious stones, and semi-precious stones.

Silver Jewelry Cleansing Formula cleans all types of silver jewelry including sterling silver, silver plate, and silver with gemstones.

You will find after using the Sonic Dazzle Stik that it is a quick, easy, and extremely effective cleaning method for all your jewelry. When examining your jewelry you will see that it looks "LIKE A JEWELER CLEANED IT".

1 Silver Jewelry Cleansing Formula

with exclusive tarnish control

in 1fl.oz. Dropper Bottle

2 AAA Batteries installed

CLEANING ELEMENTS INCLUDED

- 1 Replaceable Brush Head
- with UltraSoft® polished tipped bristles

1 Advanced Jewelry Cleansing Gel in 1fl.oz. Dropper Bottle

STORAGE

Store in a clean, dry location. Remove worn-out batteries before storing appliance.

CLEANING TIPS

Visit www.CONNOISSEURS.com for great cleaning tips plus more information about our complete line of "Beauty Treatments for Jewelry"."



© 2015 Connoisseurs Products Corp

www.connoisseurs.com

ONE-YEAR WARRANTY

1. Connoisseurs warrants this unit to be free of defects in workmanship and materials for one year from date of purchase.

2. If any malfunction occurs, do not use your jewelry cleaner. Connoisseurs will repair or replace it at no charge to you. Simply mail your jewelry cleaner postage paid to the address below with \$6.00 USD to cover handling costs. Be certain that your jewelry cleaner is wrapped carefully when mailing, and you include your receipt with date of purchase.


3. Your warranty will be void if malfunction was caused by unreasonable use or was damaged while in your possession. To assure prompt service, please include a letter indicating the specific cause for returning the unit. Allow 4 weeks for servicing and mailing time. Upon the expiration of the warranty period, replacement or repair may be made, but additional charges will apply.

4. Mail to: Connoisseurs Products Corporation Atten: Warranty Repair 17 Presidential Way Woburn, MA 01801-1040

BEFORE USE

Before you use the product, be sure to pull the battery protection tab out from the bottom of the Stik. You will need to remove the battery cover before pulling tab. (see instructions for replacing batteries)

After the tab has been pulled out, replace the battery cover and follow the directions for use.

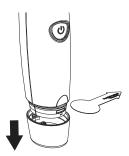

DIRECTIONS FOR USE

- Remove cap.
- 2 Wet the brush head (take care to avoid getting handle wet)
- Place a small bead of Advanced Cleansing Gel or Silver Cleansing Formula onto your jewelry.
- Place brush tip in contact with jewelry, prior to turning the unit ON.

Press the power button to start cleaning. A slight delay in start-up is normal.

For best results, rotate the Dazzle Stik around the jewelry to get into all the crevices.

When cleaning is complete, press the power button again to turn the unit OFF.

Gently rinse the jewelry and dry with a soft, lint-free cloth.

 
Rinse brush head (take care to avoid getting handle wet)

 
6

Dry bristles with soft cloth or tissue and replace cap.

 
Store power brush and cleansing formula bottles in a convenient dry place.












HOW TO REPLACE BATTERIES


To Remove battery cover:

Place fingers on flat surface of housing Gently push down on battery cover to remove

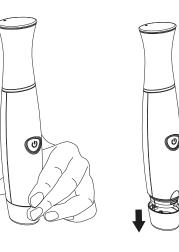


Insert 2 AAA batteries into the battery compartment:

 Orientate batteries according to the polarity markings on the side of the housing



To Replace the battery cover:

 Push cover tightly against housing



HOW TO REPLACE BRUSH HEAD

To Remove the bristle head:

To Replace the bristle head:

Align the angled surfaces on the back side of the bristle head to the


Gently push the bristle head onto the center pin until it locks in place.

angled surfaces on the center pin of the housing.

Use the alignment indicator as a guide.

Alignment indicator

Insert a small tool into the slot on the top of the bristle head. Gently rotate the tool to pop the bristle head off the housing.

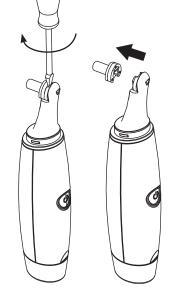

CONNOISSEURS

SONIC DAZZLE STIK.

REFILL PACKS

Before your cleaning solution bottle is empty or your brush head is worn, you can find a refill pack at your local retailer. These packs contain a 1 fl.oz. bottle of cleaning solution and one replacement brush head.

Please refer to this instruction booklet for how to replace the brush head or visit our Customer Support page at www.CONNOISSEURS.com.

Silver Jewelry Formula

Advanced Jewelry Formula

Perfect for all types of Silver Jewelry including Sterling Silver, Silver Plate, and Silver with Gemstones.

Perfect for Gold, Platinum, Diamonds, Fashion Jewelry, Precious Stones, and Semi-Precious





